

"TRADER" SERVICE SHEET

1789

BAIRD M103

Battery Operated Portable Radio Receiver

EMPLYING seven transistors and two crystal diodes, Baird M103 is a battery operated portable radio receiver.

An internal ferrite rod aerial provides reception on waveband ranges 1,145-2,000m (l.w.), 200-560m (m.w.) and 183-218m (bandspread m.w.), with waveband selection by press buttons. A socket is provided for the connection of a car aerial and another socket allows the output of the receiver to be fed to an external loudspeaker, earphone or tape recorder, the internal loudspeaker being automatically disconnected as the plug is inserted.

A variable treble cut tone control is fitted, also a speech/music switch which provides bass cut.

TRANSISTOR ANALYSIS


Transistor voltages given in the table in col. 1 were taken from data supplied by the manufacturers. All readings are negative with respect to chassis.

CIRCUIT DESCRIPTION

The aerial tuned circuit utilizes two sections of a four gang tuning capacitor. One section, C4 with its trimmer C3 tunes the medium wave (L2) and long wave (L3) windings on the ferrite rod aerial, while the other section C2, with its trimmer C1 tunes the medium wave aerial coil (L2) when the receiver is switched to bandspread, an arrangement which overcomes the tracking difficulty encountered when using one tuning capacitor for both medium wave and bandspread reception.

Signals induced into L2 and L3 are inductively coupled to the base of TR1 by L5 and L4 respectively. C7 is an isolating capacitor to prevent the base potential of TR1, provided by R1 and R2, from being short-circuited by the low resistance windings L4/L5.

TR1 is connected as a self-oscillating mixer, L8 is the tuned oscillator winding, while L6 and L7 are coupling coils providing the positive feedback necessary for oscillation.

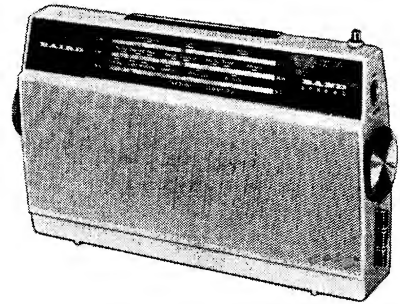

L8 is tuned on medium wave by C16 and C17 and on long wave by a combination of C16, C17, C12 and C13. C12 and C13 being fixed and variable l.w. trimmers.

As in the aerial circuit, on bandspread a separate tuning gang section C18 is used with its associated trimmer C19. Resistors R4 and R19 are incorporated to maintain constant oscillator voltage on all wavebands.

After additive mixing, the 470kc/s i.f. signal appearing at TR1 collector is fed via S8 to tappings on the primary of T1 which

(Continued overleaf col. 1)

Transistor Table


Transistor	Emitter (V)	Base (V)	Collector (V)
TR1 AF117	0.7	0.9	7.0
TR2 AF117	0.9	1.0	5.6
TR3 AF117	1.0	1.1	7.0
TR4 AC127	4.4	4.0	0.15
TR5 OC81	—	0.15	4.4
TR6 OC81	4.5	4.7	9.0
TR7 AC127	4.5	4.4	—

Resistors				Capacitors				Coils				Miscellaneous			
R1	47kΩ	C2		C1	—	B1		L1	—	A1		S1-S12	—	A2	
R2	6.8kΩ	C2		C2	—	B1		L2	—	B1		S13	—	C1	
R3	1kΩ	C2		C3	—	C1		L3	—	A1		S14	—	A1	
R4	270kΩ	C2		C4	—	C1		L4	—	A1		X1	OA79	C2	
R5	10kΩ	C2		C5	4.7pF	C1		L5	—	B1		X2	OA90	B2	
R6	100kΩ	B2		C6	50pF	A1		L6	—	C2					
R7	2.7kΩ	C2		C7	0.01μF	C2									
R8	150kΩ	C2													
R9	1kΩ	B2													
R10	680Ω	C2													
R11	22kΩ	B2													
R12	4.7kΩ	B2													
R13	39kΩ	C2													
R14	1kΩ	B2													
R15	470kΩ	B2													
R16	10kΩ	B2													
R17	50kΩ	A1													
R18	50kΩ	A1													
R19	470kΩ	B2													
R20	22kΩ	B2													
R21	33kΩ	B2													
R22	4.7kΩ	B2													
R23	390kΩ	A2													
R24	560kΩ	A2													
R25	560kΩ	A2													
R26	1kΩ	A2													
R27	82Ω	A2													
R28	2.2Ω	A2													
R29	2.2Ω	A2													
R30	220Ω	B2													
C8	0.1μF	C2													
C9	0.022μF	C2													
C10	180pF	C2													
C11	140pF	C2													
C12	120pF	C1													
C13	80pF	C2													
C14	25pF	C2													
C15	370pF	C2													
C16	—	C2													
C17	—	C2													
C18	—	C2													
C19	—	C2													
C20	—	C2													
C21	4μF	B2													
C22	2.5μF	C2													
C23	0.1μF	C2													
C24	270pF	B2													
C25	270pF	B2													
C26	0.02μF	B2													
C27	0.1μF	B2													
C28	270pF	B2													
C29	0.5μF	B2													
C30	0.01μF	B2													
C31	0.01μF	B2													
C32	160pF	A2													
C33	6,800pF	B2													
C34	0.47μF	B2													
C35	0.22μF	B2													
C36	0.47μF	B2													
C40	200μF	B2													
C41	160μF	B2													
C42	2,000pF	A2													
C43	200μF	A2													
L7	—	C2													
L8	—	C2													
L9	15Ω	†													
T1	—	C2													
T2	—	B2													
T3	—	B2													

Miscellaneous


S1-S12	—	A2
S13	—	C1
S14	—	A1
X1	OA79	C2
X2	OA90	B2

† Speaker

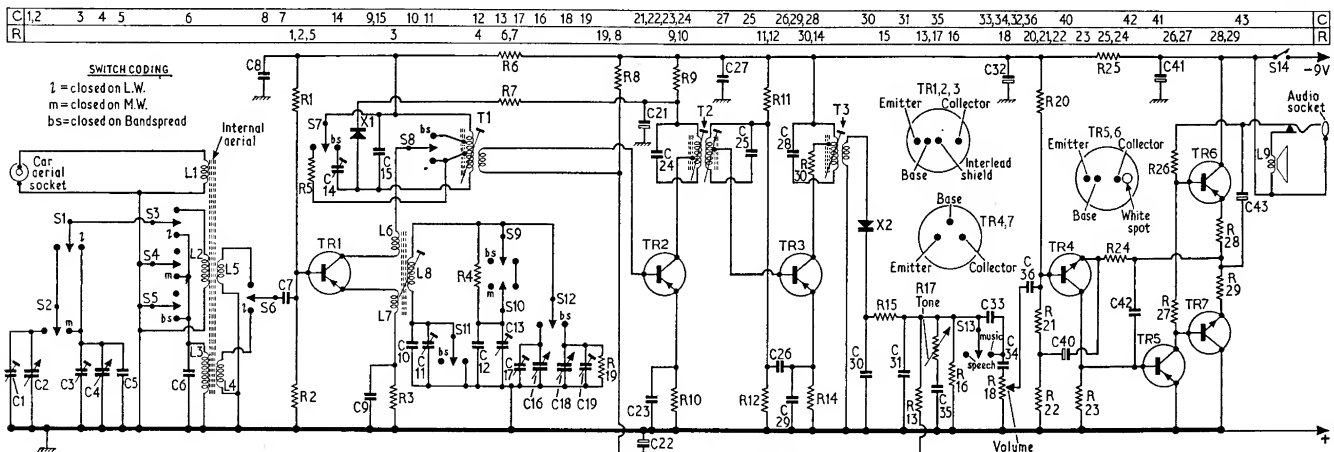

Circuit diagram of Baird M103.

General view of component side of printed panel as seen from the front with the chassis removed from the case.

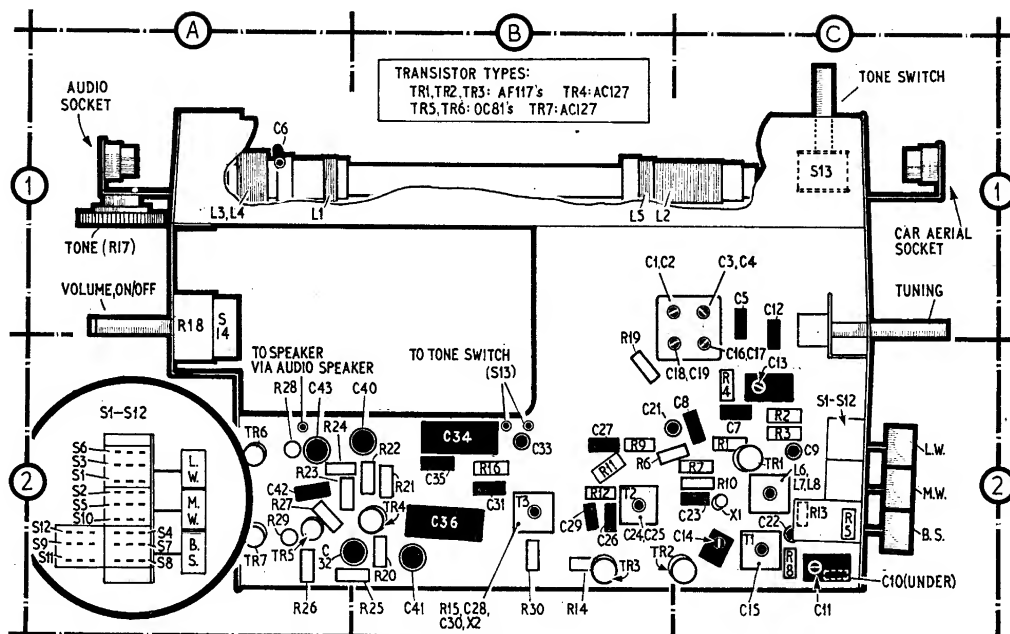

Circuit Description—continued

is shunted by R5 to provide a flat i.f. response for m.w. and l.w. reception and is tapped to provide a restricted response for bandspread reception. C14 is switched in on bandspread to correct the tuning of T1 when the collector is switched to the upper tap.

Signals at i.f. are fed to the i.f. amplifiers TR2 and TR3, and finally to the demodulator diode X2. After demodulation, the resultant audio signal is filtered by C30, R15 and C31 and passed to the volume control via the tone switch circuit S13 and C33.

The d.c. component is filtered by R13 and C22 and fed to the base of TR2 via the secondary of T1 to provide a.g.c.

Diode X1 is effectively connected across the primary of T1 and is normally held "cut off" by the voltage drop across R9. When a strong signal is received, a large a.g.c. voltage is fed to the base of TR2 reducing its collector current and thus causing the voltage across R9 to fall. X1 conducts and damps the primary of T1 causing a further fall in overall gain.

From the volume control the audio signal is fed to TR4 for amplification and appears across TR4 collector load R23. This is d.c. coupled to the base of the driver transistor TR5.

Signals developed across TR5 collector load R26 are fed to the bases of the complementary output stage TR6/TR7.

R27 is included to maintain the correct base/emitter potential, and thus the correct quiescent current, for the output transistors.

Audio output is developed across the 15Ω loudspeaker L9.

CIRCUIT ALIGNMENT

Equipment Required.—An a.m. signal generator with 30 per cent modulation; an audio output meter with an impedance to match 15Ω; an r.f. coupling loop and suitable non-ferrous trimming tools. During alignment the signal level should be adjusted to maintain an output of 50mW with the volume control at maximum.

- 1.—Connect the output meter in place of the loudspeaker. Turn the tuning gang to maximum, and with the tone control turned to maximum treble, the speech/music switch depressed and the receiver switched to m.w., feed in a 470kc/s signal via the car aerial socket.
- 2.—Adjust the core of T3 for maximum output (tune to peak nearest the top of former).
- 3.—Adjust the bottom core of T2 for maximum output (tune to outer peak).
- 4.—Adjust the top core of T2 for maximum output (tune to outer peak).
- 5.—Adjust the core of T1 for maximum output.
- 6.—Repeat as necessary, in the same order, until no further improvement can be obtained.
- 7.—Depress "Bandspread" button and adjust C14 for maximum output, keeping the signal input level as low as possible.
- 8.—With receiver still switched to m.w., set all four trimming capacitors located on the rear of the tuning gang assembly to their mid-position. With the tuning gang

at maximum, adjust the cursor to line up with the calibration mark at the low frequency end of the scale.


- 9.—Tune receiver to 500m and feed in a 600kc/s signal via the r.f. coupling loop. Adjust L8 to tune in this signal. Adjust L2 for maximum output, by sliding the former along the ferrite rod.
- 10.—Tune receiver to 200m and feed in a 1.5Mc/s signal via the r.f. loop. Adjust C17 to tune in this signal. Adjust C3 for maximum output.
- 11.—Repeat operations 9 and 10 until the calibration is correct and maximum output is obtained.
- 12.—Switch receiver to l.w. and tune to 1,800m. Feed in a 166.6kc/s signal and adjust C13 to tune in this signal. Adjust L3 for maximum output by sliding the former along the ferrite rod.
- 13.—Switch to "Bandspread" and tune to 185m. Feed in a 1,620kc/s signal and adjust C19 to tune in this signal. Adjust C1 for maximum output. Tune receiver to 210m and feed in a 1,437kc/s signal. Adjust C11 to tune in this signal. Retune receiver to 185m and readjust C11. Repeat procedure until calibration is correct at 185 and 210m. Seal C11 with wax.

Note: Due to the tolerance in the capacitance of the tuning gang, C11 may have to be fully unscrewed. It is necessary therefore, to follow the alignment procedure carefully in order to obtain best results.

GENERAL NOTES

Dismantling.—To remove the chassis from the case, first remove the back cover, the battery and the two large push-on knobs. Loosen the two screws which hold the bracket carrying the tone control and remove the three chassis fixing screws. (Two of these are under the tuning knob on the outside of the case and the other under the volume control spindle inside the cabinet.) Slide the tone control bracket back and lift the volume control end of the chassis out of the case, at the same time sliding the press buttons out of their slot in the case. The chassis can then be removed to the extent of the loudspeaker leads. Should the chassis have to be removed completely, the loudspeaker leads should be unsoldered.

Battery.—Ever Ready PP7 or equivalent.

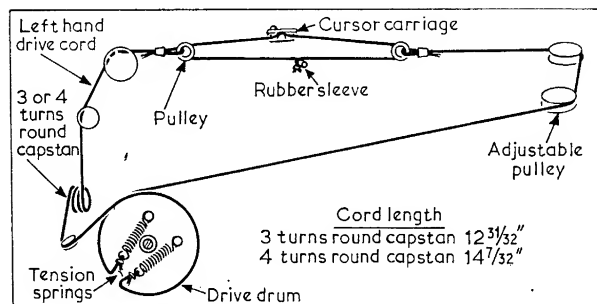

Drive cord assembly as seen from rear of the receiver.